


IMPORTANT

PRODUCT WARRANTY INFORMATION

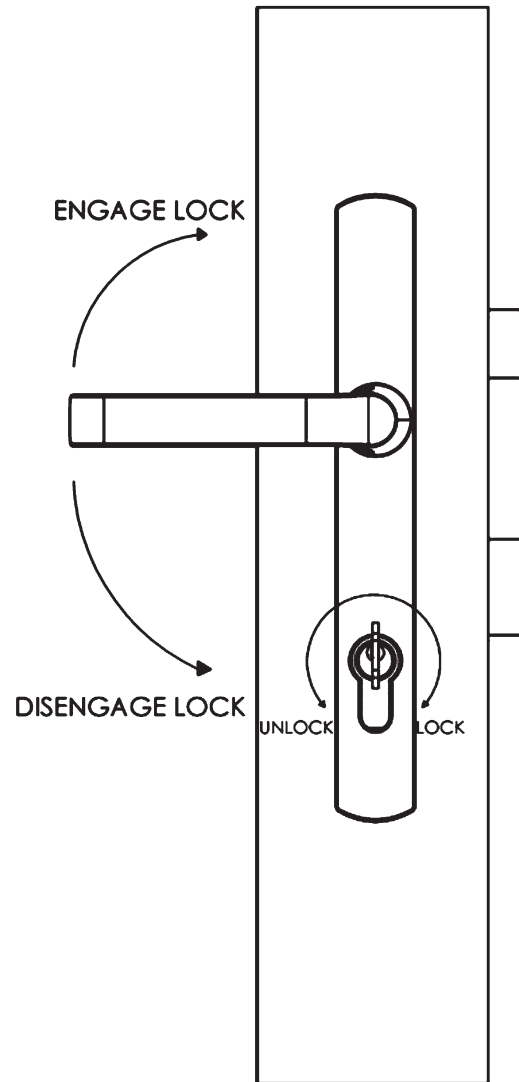

**PLEASE NOTE:
ENGAGE THE LOCK BEFORE LOCKING**

DesignerLine™ Hinged Door THREE POINT LOCK

Operating Instructions

When operating the point lock never use excessive force. This can damage the lock and void warranty.

Disengaging the Lock

Disengage the lock by turning the handle down as shown in picture.

Engaging the Lock

Engage the lock by lifting the handle as shown in the photo.

Locking

Lock and unlock the handle by turning the key as shown in the photo.